

9.2 EXTERIOR SECTION

1

2

3

4

A


B

C

D

E


F

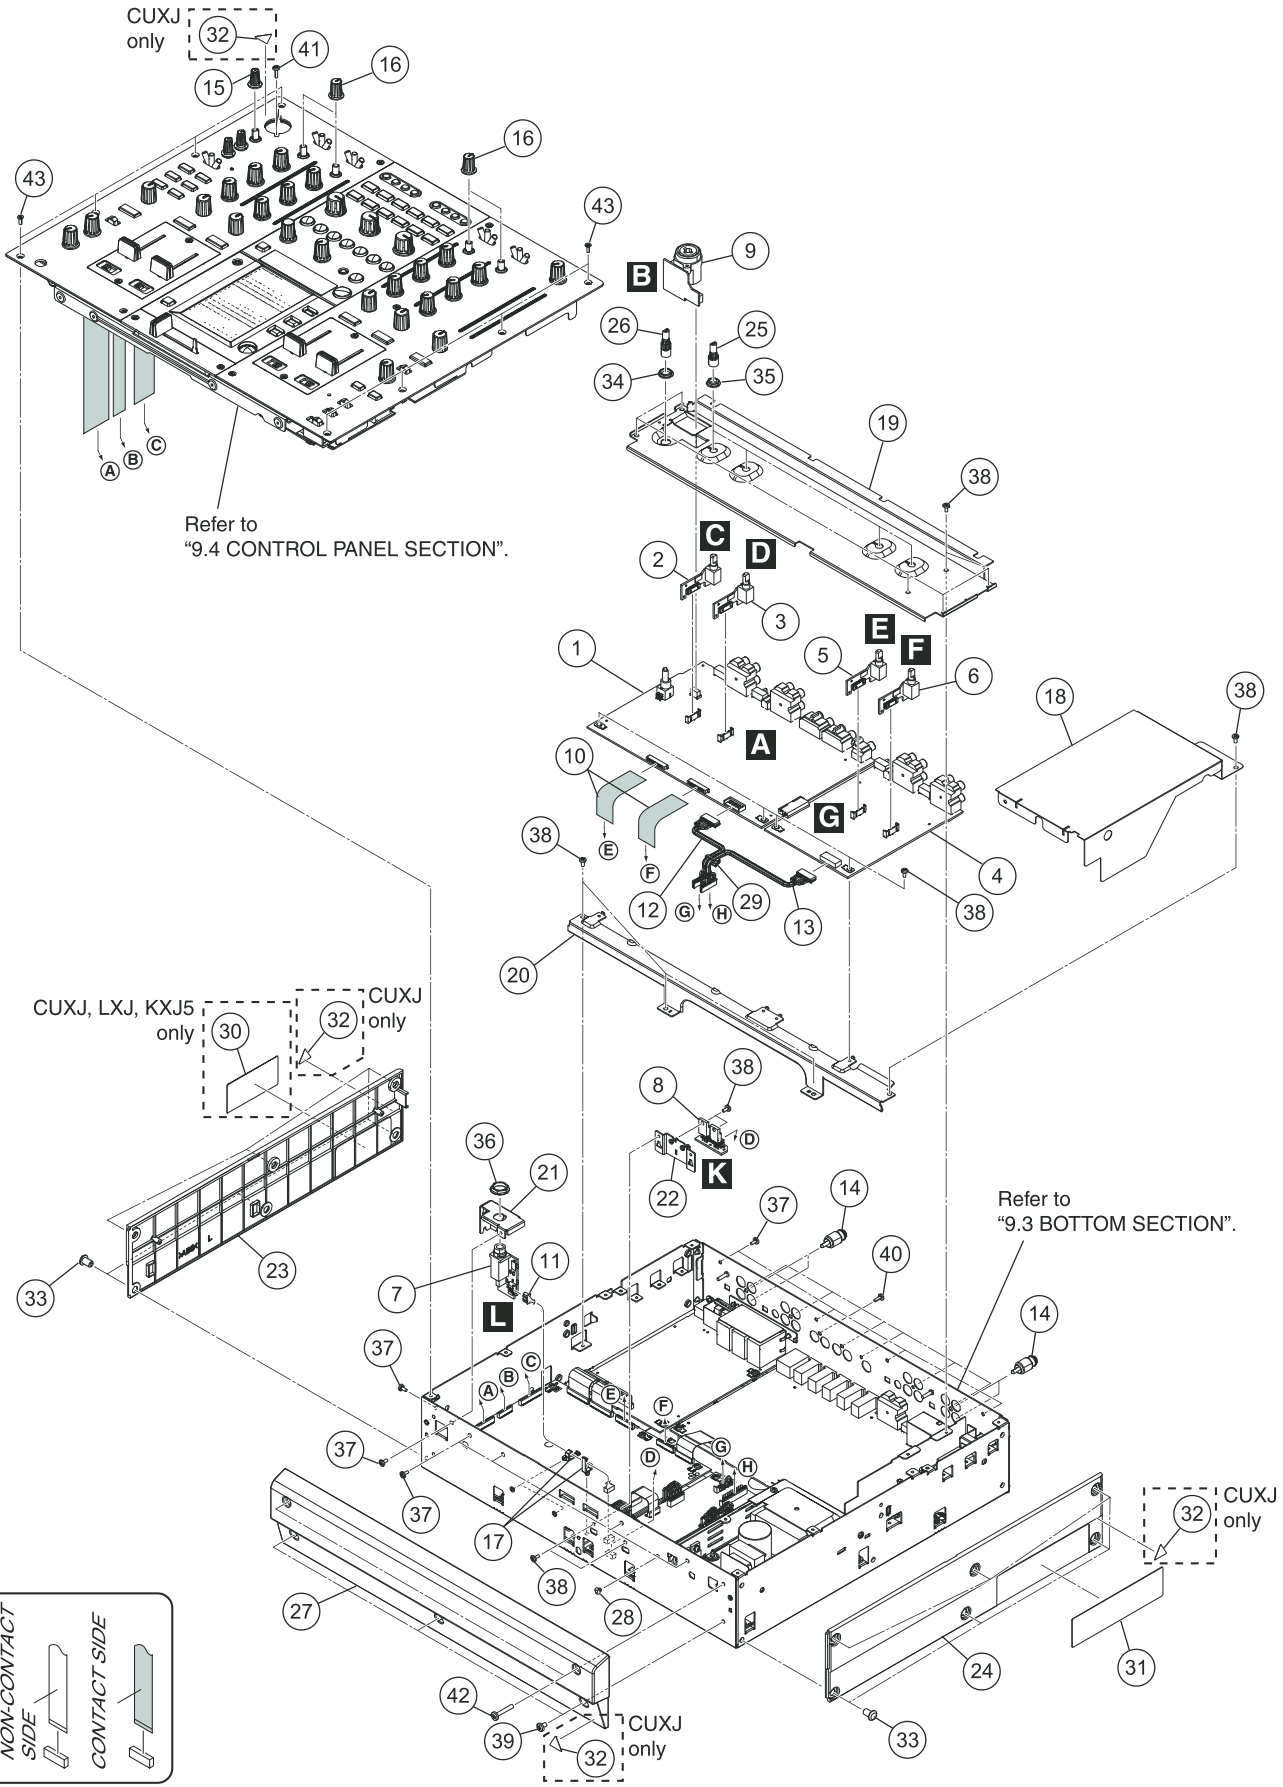

Refer to
"9.4 CONTROL PANEL SECTION".

CUXJ, LXJ, KXJ5
only

Refer to
"9.3 BOTTOM SECTION".

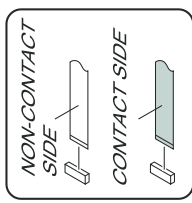

1

2

3

4